


WIRELESS KINETIC SWITCH · 4 KEYS

A switch with no wires and no battery

The GS-WKS3454 is a push-button wireless switch powered by the energy of each press, with no battery. It works with GEYER wireless modules: it switches lights on and off and, with a dimmer module, adjusts brightness with a long press. Stick it or screw it wherever you like.

- No battery
- RF 433 MHz
- 4 keys

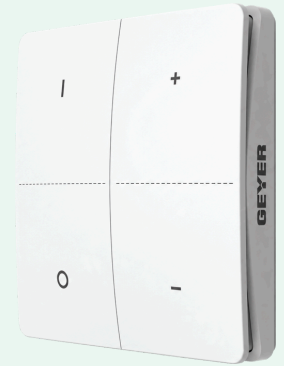


1 Get to know the switch

- Four keys in two pairs (left and right). Each pair has an up and a down key.
- Works only when paired with a wireless receiving module (e.g. a lighting or dimmer module).
- Range up to 80 m outdoors and 25 m indoors.


2 Installation

Method 1 · Double-sided tape

Stick the switch on a stable, smooth and clean surface such as glass, marble or tile, using the tape included in the package.

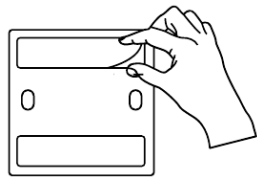

1. Attach the tape to the back

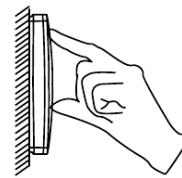


2. Stick the switch on a clean surface

Method 2 · Screws


Carefully open the switch and fix its base to the wall with screws or onto a standard 86-type switch box.



1. Carefully open the switch panel

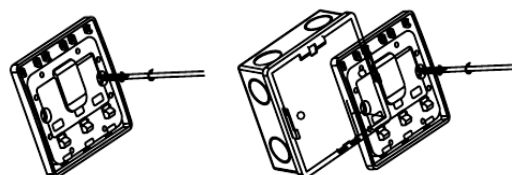

2. Screw it to the wall or an 86-type box

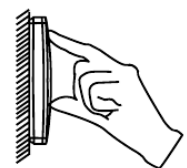

3. Press the key back onto the base

3 Pair with the module

Standard pairing

Press and hold the module's **pairing button** for about 3 seconds and release it when the light flashes. Press a switch key **once** (not quickly or repeatedly). The light goes off: pairing is complete.


The key switches the module on and off. With a dimmer module, a long press cycles the brightness and the last level is remembered.

Directional pairing

To control several modules together. Press and hold the module's pairing button for about 3 seconds and release it when it flashes. Press one switch key **4 times within 1 second**. The light goes off: pairing is complete.

The switch splits into two groups (up / down pairs). Each group is paired the same way.

Directional control of the 4 keys

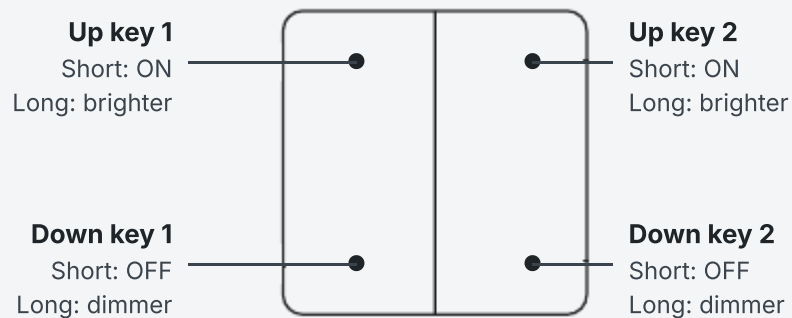

4 If something does not work

A key came off the base

E.g. after a drop. Check that the plastic is not broken and press the key back onto the base.

After pairing, the key only turns off or only dims

Press and hold the module's pairing button for about 10 seconds until the light goes off. Pair again, pressing the key only once.

5

Specifications

Model	GS-WKS3454	Frequency	RF 433 MHz
Keys	4	Range*	80 m outdoor · 25 m indoor
Type	Push button	Operating temperature	−20 ... +55 °C
Power	Self-powered (no battery)	Use	Paired with a wireless module

* Range is based on laboratory tests and may vary with the environment.

i

Good to know

- Directional pairing is supported only by 2-key or 4-key switches. A 1-key switch in directional pairing can only turn off; pair it again in standard mode.
- One switch can be paired with several modules for one-to-many control. See also the module’s instructions.

GEYER

Geyer Hellas S.A.

Drosia Chalkis, Evia, GR 34100

Tel: +30 22210 98711

cs@geyer.gr

www.geyer.gr

