

1 GS-THWHB-W / B - Smart Wi-Fi Room & Boiler Thermostat

Basic information and installation



WI-FI ROOM & BOILER THERMOSTAT

 
Common guide for the white and black versions.

Power supply	220 VAC
Resistive load	2 outputs, up to 5 A each
Setting range	5-37 °C
Network	Wi-Fi 2.4 GHz


INSTALLATION STEPS

- 1 Isolate the power supply and verify absence of voltage.
- 2 Remove the rear cover and secure it to the wall.
- 3 Connect L / N, heating output VCOM/VNO/VNC and boiler output HCOM/HNO/HNC.
- 4 Align the device and secure it to the cover.

CONNECTION DIAGRAM

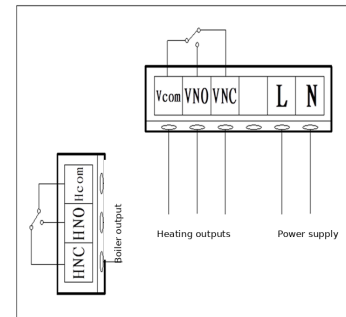

THERMOSTAT DISPLAY DESCRIPTION

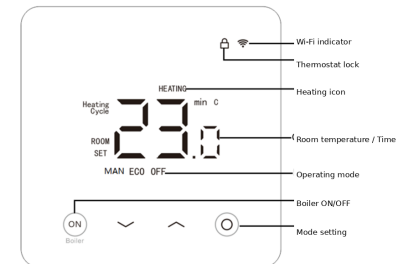 

BEFORE PAIRING

- 2.4 GHz Wi-Fi network with Internet access.
- GEYER Smart app and active Bluetooth on the phone.

ELECTRICAL SAFETY

Installation by a licensed electrician only, with the power isolated and in accordance with applicable regulations.

COMPATIBILITY

Heating and boiler wiring must be assessed by the installer.

2 Pairing and basic use

GEYER Smart | Wi-Fi 2.4 GHz



GEYER Smart

Download the app and create or sign in to your account.



 
 
 
 
 
SCAN TO DOWNLOAD



Choose "Register" or sign in with an existing account.

ADD & PAIR IN 5 STEPS

The phone must be connected to 2.4 GHz Wi-Fi with Internet access.

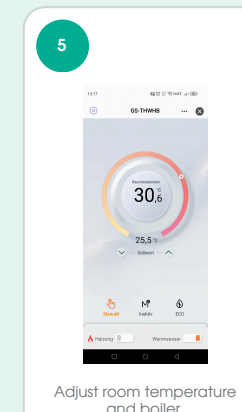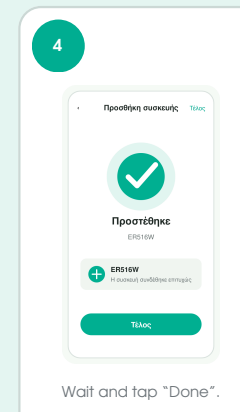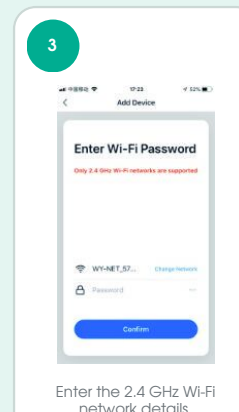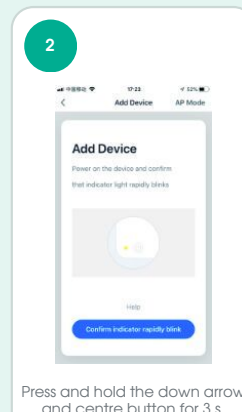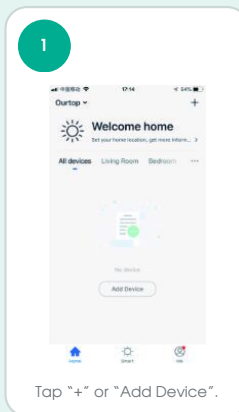

BASIC FUNCTIONS



REMOTE CONTROL

Room temperature and independent boiler control.



WEEKLY SCHEDULE

Set temperatures by day and time in the app.



ECO

Heating activation time 1-20 minutes.



SETTINGS

Hysteresis, calibration, brightness and display lock.

IF PAIRING FAILS

Check 2.4 GHz Wi-Fi, Internet, Bluetooth and network password.

Repeat the device-addition process in the app.

Wi-Fi reset: press and hold the down arrow and centre button for 3 s, until the Wi-Fi indicator flashes.



MANUALS & DOCUMENTS

Scan for the detailed user manual and other product documents.