

1 GS-THWH-W / B - Smart Wi-Fi Room Thermostat

Basic information and installation



WI-FI ROOM THERMOSTAT


Common guide for the white and black versions.

Power supply	220 VAC
Resistive load	One load, up to 5 A
Setting range	5-37 °C
Network	Wi-Fi 2.4 GHz


INSTALLATION STEPS

- 1 Isolate the power supply and verify absence of voltage.
- 2 Remove the rear cover and secure it to the wall.
- 3 Connect the supply to L / N and the heating control output to VCOM and VNO or VNC.
- 4 Align the device and secure it to the cover.

CONNECTION DIAGRAM

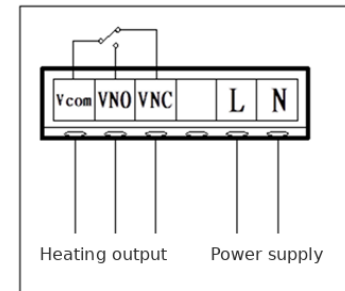

THERMOSTAT DISPLAY DESCRIPTION

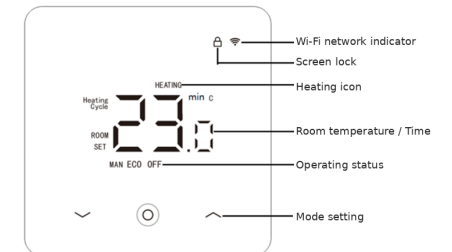

BEFORE PAIRING

- 2.4 GHz Wi-Fi network with Internet access.
- GEYER Smart app and active Bluetooth on the phone.

ELECTRICAL SAFETY

Installation by a licensed electrician only, with the power isolated and in accordance with applicable regulations.

COMPATIBILITY

The control input and heating-system wiring must be assessed by the installer.

2

Pairing and basic use

GEYER Smart | Wi-Fi 2.4 GHz



GEYER Smart

Download the app and create or sign in to your account.



SCAN TO DOWNLOAD



Choose "Register" or sign in with an existing account.

ADD & PAIR IN 5 STEPS

The phone must be connected to 2.4 GHz Wi-Fi with Internet access.

- Tap "+" or "Add Device".
- Press and hold the down arrow and centre button for 3 s.
- Enter the 2.4 GHz Wi-Fi network details.
- Wait and tap "Done".
- Adjust temperature and operating mode.

BASIC FUNCTIONS



REMOTE CONTROL

View room temperature and change the setpoint.



WEEKLY SCHEDULE

Set temperatures by day and time in the app.



ECO

Heating activation time 1-20 minutes.



SETTINGS

Hysteresis, calibration, brightness and display lock.

IF PAIRING FAILS

Check 2.4 GHz Wi-Fi, Internet, Bluetooth and network password.

Repeat the device-addition process in the app.

Wi-Fi reset: press and hold the down arrow and centre button for 3 s, until the Wi-Fi indicator flashes.



MANUALS & DOCUMENTS

Scan for the detailed user manual and other product documents.